NEVERDED

MOBILE POWER FOR A MOBILE WORLD

Troubleshooting

My vehicle will not start?

Step 1 Check the MAXX battery strength…One full bar showing is the minimum requirement to jump start a vehicle.
Step 2 Clean the battery terminals to insure connections are adequate and connected correctly.
Step 3 Check that jump cable connection to the NeverDed is all the way in.
Step 4 Leave the NeverDed connected to the vehicle battery providing a charge for a few minutes and attempt to start vehicle again.
Step 5 Try connecting the Black Cable to ground of vehicle (Must be exposed metal)and the Red (+) to the Positive Red (+) battery terminal. This will Bypass pushing the current through the battery and directly to the starter for more starting power.
Step 6 Some vehicles require more cranking amps to turnover and need more power than offered with the NeverDed MAXX. This is generally a problem with older diesel pickup trucks

---

My Laptop will not charge?

Step 1 Check the MAXX battery strength to confirm that it has a charge and the master switch is in the on position.
Step 2 Check to make sure you have the proper laptop adapter
Step 3 Check all connections
Step 4 Press the Key Switch [ ] up to 3 times to select the correct voltage for your laptop either 12V, 16V, or 19 Volt. The MAXX lights will be on while charging.
Step 5 Still not charging; check laptop owner's manual to confirm your laptop is compatible with our product.
Notes:
1. Some companies use proprietary charging cables specific to a laptop model or require an exact wattage to charge laptop batteries.
2. It is our experience that you will be able to power up the laptop, just not charge the battery in cases of proprietary cables.
3. Apple currently does not supply the correct DC adapter to MagSafe and you will not be able to charge devices using the MagSafe.
4. Most laptops use 12, 16 or 19 volts to power them, some laptops require higher and occasionally lower volts than the NeverDed MAXX supplies. In these cases, your laptop may not be compatible with our product and you will need to confirm compatibility through the owner's manual.

Is the NeverDed MAXX supposed to get warm?

The MAXX will get warm and on the edge of hot when charging laptops and or multiple devices at the same time. This is normal for the MAXX, however, it should not get too hot to hold with bare hand.

User Manual

Specifications
Rechargeable: Yes
Battery Real Capacity: 13,600 mAh
Product Input: AC/DC 15V/1A
Product Output: DC 5V/2A; DC 12V/2A; DC 19V/16V/12V 2A/3.5A/3.5A
Starting current: >300A Peak current: 500A (<3 second)
Cycle life: 1000 times Full charge times: about 3-6 hours
Operating temperature: 0-85F Authenticate: CE RoHS FCC

Contents

NeverDed MAXX
AC Adapter
User Manual
Adapters for Laptop x 8
Carrying Bag
Car Charger
Battery Clip/Cable
8" Laptop Adapter Cable
4-in-1 USB Cable

Laptop Adapters

6.0 x 4.4mm With Pin For Sony laptops
6.3 x 3.0mm For Toshiba
5.5 x 2.5mm Multiple brands
5.5 x 1.7mm For ACER
5.0mm With Pin For Samsung
4.8 x 1.7mm For HP
7.4 x 5.0mm For DELL HP, multiple brands
7.9mm With Pin For IBM

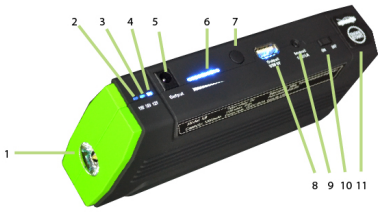

1. LED light
2. 19v voltage output indicator
3. 16v voltage output indicator
4. 12v voltage output indicator
5. 12/16/19v output
6. Battery indicator
7. Key Switch
8. USB 5v -2A output
9. 15v 1A input
10. On / Off
11. 12v - 300-500A Jump Start input

Question: How do I jump start my vehicle?

Step 1 Turn off all vehicle accessories…lights, radio, etc. Make sure your MAXX has at least one light showing, approximately 20% battery strength remaining and turn the MAXX to off position.
Step 2 Connect the Red (+) cable first, making sure that the clamp is "biting" securely on the Red (+) battery terminal.
Step 3 Connect the Black (-) cable second, making sure that the clamp is "biting" securely on the Black (-) battery terminal.
Step 4 Once both cables are secure in proper position, plug the end of Jump Cables into the MAXX. Gently lift the tab labeled with a picture of a car exposing the connection. Align the Jump Cable end to the device and plug it in. Make sure the MAXX is not in the path of moving parts and attempt to start vehicle. If the vehicle fails to start, wait 30 seconds with connections in place and attempt again until the vehicle starts. Once the vehicle starts, remove the cables in reverse order.

Question: How do I charge cell phones, tablets and devices that use USB cords?

Step 1 Turn the Start Power to the on position.
Step 2 Plug the USB 4 in 1 cord, or the USB cord that came with your device into the NeverDed MAXX. Output 5V/1A, and the opposing end into your device.
Step 3 Press the Key Switch [ ] to start charging

Question: How do I charge a laptop?

Step 1 Locate the correct voltage requirement to safely charge your laptop. This is generally located on the back of the laptop on a permanent label. If compatible continue to Step 2.
Step 2 Select the correct barrel adapter from kit matching your laptop AC power cord and plug it into the 8" adapter cable.
Step 3 Turn the MAXX to the on position and select the correct voltage by depressing the Key Switch [ ] up to three times until you see the proper voltage indicator light on. Plug the 8" Adapter Cable into the Output on the MAXX and the opposite end into your laptop.

Step 4 Let the laptop charge, or use it as you charge it.

Question: What devices can I charge or supply power to with the NeverDed MAXX?

All Laptop Computer PC's: Apple | Acer |Asus | HP-Compaq |Dell | Sony | Samsung | IBM | Lenovo | Toshiba | Gateway.
Apple Devices: IPhone 5S|5C|5|4S|4|3GS|3, IPad 4|3|2| Mini| Air|IPad, IPods.
Samsung: Samsung Galaxy S5|S4|S3|S2|S|Galaxy Nexus|Galaxy Note|Note 2|Note 3|Mega 6.3"|Mega 5.8"|Samsung Galaxy Tab.
HTC: HTC One X|One S|One V|Sensation XE XL|EVO 4G|Radar 4G.
Nokia:Lumia 920 900 710 800 | N8 | N9.
Motorola: Droid Razr, Bionic | Atrix 2 | Triumph.
Sony: Sony Xperia Series, Xperia Z, Xperia ZL, Xperia Z Ultra, Xperia SL, Xperia U, Xperia P, Xperia S, Xperia TL.
Blackberry:Z10, Torch 9860, Torch 9810
LG: Nexus 4, Optimus 4X, 2X, V, S, T, 3D, 7.
Touch Screen devices: PDAs, eBooks, GPS, Kindle Fire HD

Question: How do I turn on the Flashlight?

Step 1 Turn the Start Power Switch to the on position.
Step 2 Press the Key Switch [ ] for a count of 3 seconds.
Step 3 Press the Key Switch [ ] two additional times to move to SOS or Strobe
Step 4 Turn Flashlight off by pressing the Key Switch [ ] for a count of 3 seconds.

Question: How do I recharge the NeverDed Maxx?

Step 1 Let the MAXX return to room temperature prior to recharging.
Step 2 Turn the Start Power to the off position.
Step 3 Plug the 110 AC Power Adapter into a wall outlet or the 12V Car Adapter into the vehicle outlet.
Step 4 Locate the 15V/1A Input and plug the other end of the Power adapter/Car Adapter in for approximately 4-6 hours or until all four lights are bright blue. The battery charge indicator will flash as it charges and reflects proper charging. The lights will stop flashing when unit has a full charge.
Step 5 The MAXX will hold a charge for months and will work best if you charge it on a quarterly basis. It does not have a memory and can be "topped off" at any time.